



# v-solenoid II<sup>TM</sup> STANDARD SERIES

Direct Mounting NAMUR solenoid valves  
for process valve actuators

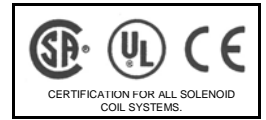

## WIRING DIAGRAM FOR STANDARD SERIES VALVES

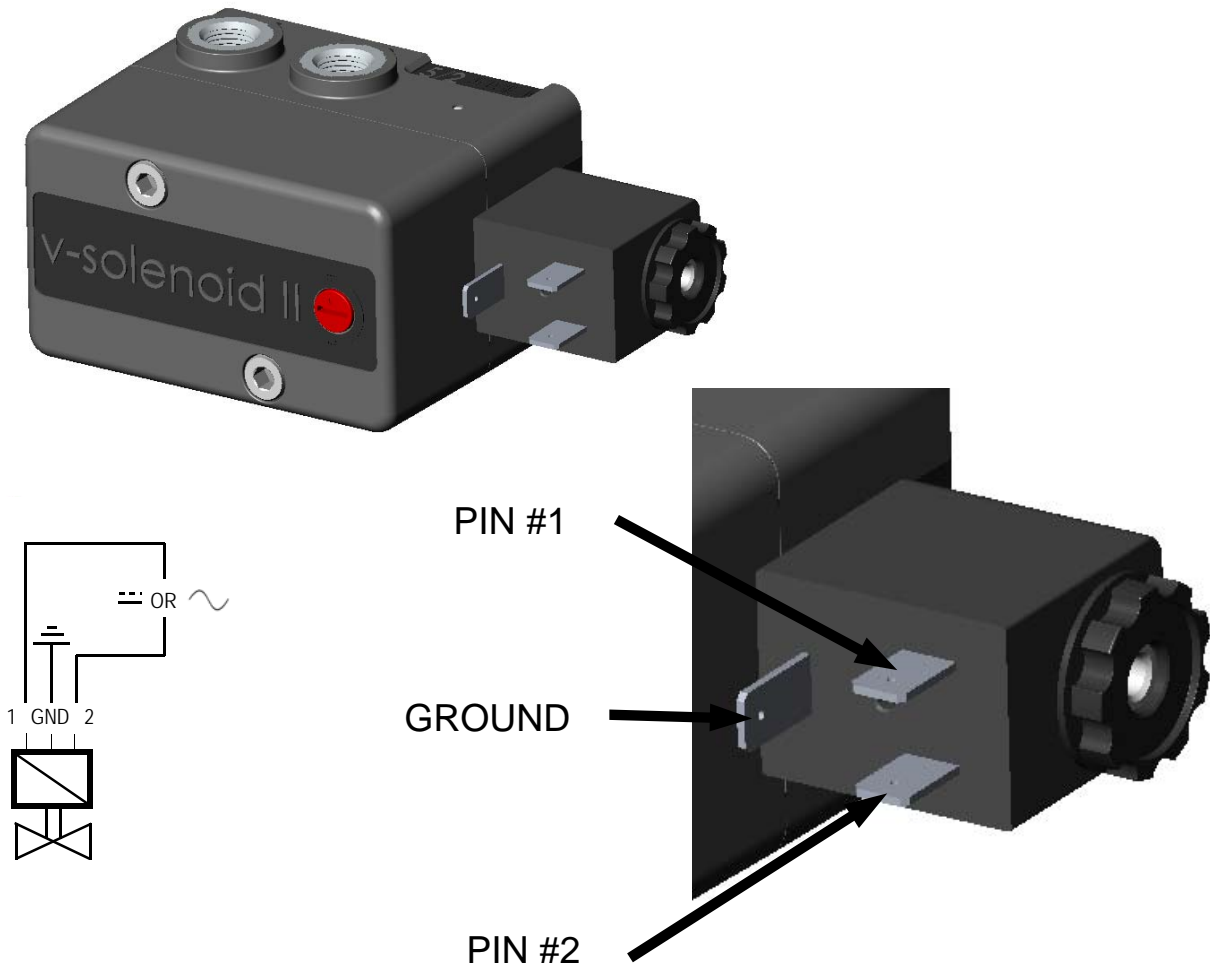

**CAUTION! BE SURE THAT THE SUPPLY TO THE SOLENOID COIL IS DEENERGIZED!**

WIRING: (AC OR DC OPERATION)

1. ENSURE THAT THE COIL IS RATED FOR THE CORRECT VOLTAGE AND FREQUENCY.
2. CONNECT PINS #1 AND #2 TO THE SUPPLY. CONNECT THE GROUND PIN TO A SUITABLE GROUND CONNECTION.
3. POLARITY CAN BE REVERSED WITHOUT DAMAGE TO THE COIL
4. THE SUPPLIED DIN CONNECTOR MUST BE USED TO PROVIDE IP65/NEMA 4 PROTECTION